


CMCP420VT SERIES INSTALLATION AND ASSEMBLY

1. REMOVE ANY DEBRIS FROM THREADED HOLE DRILLED INTO MOUNTING SURFACE.
2. INSTALL SENSOR SETSCREW (CMCP230-XX) INTO THREADED HOLE.
3. THREAD MOUNTING PAD ONTO SETSCREW UNTIL CONTACT WITH MOUNTING SURFACE.
4. THREAD CMCP420VT ONTO SETSCREW UNTIL IT IS IN CONTACT WITH MOUNTING PAD.
MAX TORQUE 30 INCH-POUNDS
5. INSTALL CMCP420EL ONTO SENSOR.
6. IF USED, USE WRENCH TO HOLD CMCP420VF WHILE TIGHTENING ELBOW.
7. FLEXIBLE CONDUIT CAN BE USED IN PLACE OF THE CMCP420EL.
8. REMOVE ELBOW COVER AND MAKE TERMINAL CONNECTIONS.

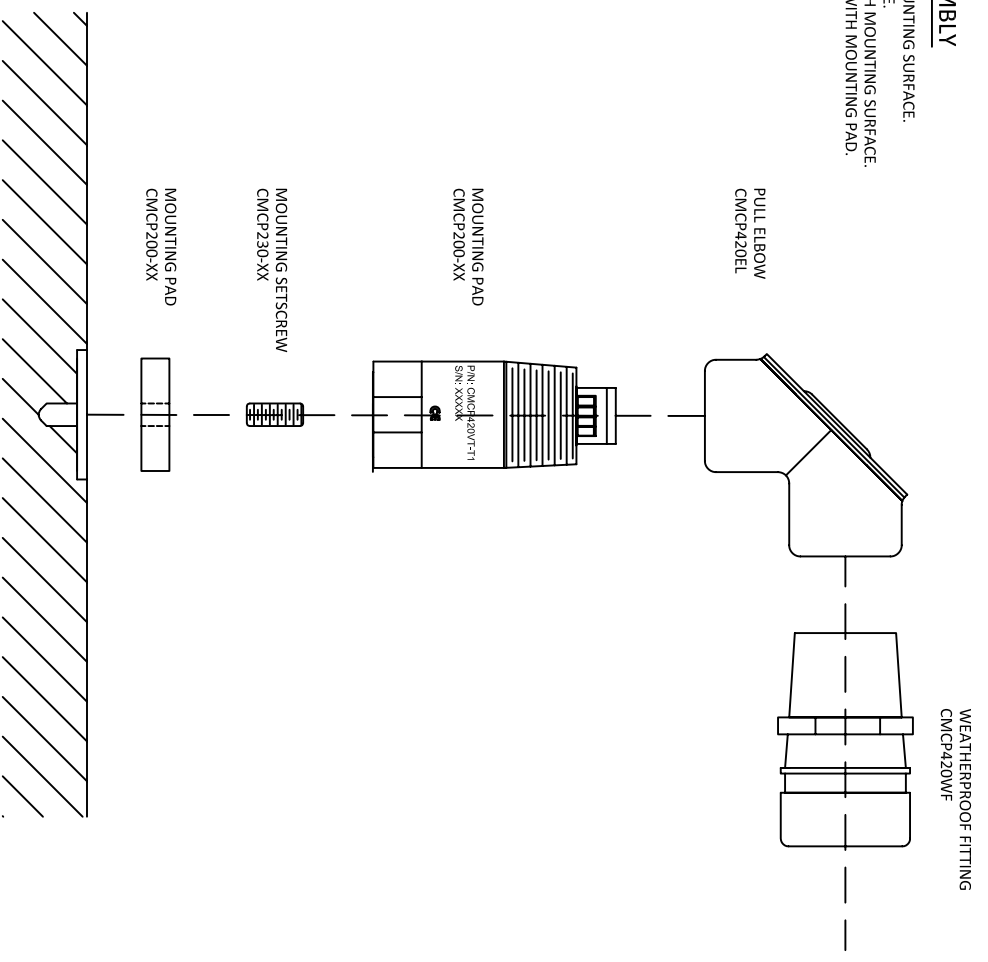

THIS DOCUMENT IS PROPERTY OF STI AND CANNOT BE UNDER ANY CIRCUMSTANCES COPIED OR USED FOR ANY UNAUTHORIZED PURPOSE. TRANSMISSION TO ANY THIRD PARTY WITHOUT APPROVAL FROM STI.

REV.	DATE	ISSUE	DESCRIPTION
1	11/18/09	ISSUE	ORIGINAL DRAWING

CUSTOMER LOCATION		DATE		STI		Sales Technology Inc. League City, Texas	
ORDER NO.		DATE	11/18/09	DATE	11/18/09	CMCP420VT SERIES ASSEMBLY	
SER. NO.		UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN INCHES.		SCALE	NONE	VTINSTALL001	SHEET 1 OF 1
TOLERANCES:		FRACTIONS: .XX ± 0.01		DECIMALS: .XXX ± 0.005		ANGLES: ± 1.0	
DRAWN		DATE		SCALE		SHEET	
MCH		11/18/09		A		A	



Notes:
 1. OPTIONAL INSTALLATION TOOL KIT - CMCP20-01
 2.
 3.
 4.